



ISRI 6500/517 Air Suspension Seat Operators Instructions

SAFETY WARNING: VEHICLE MUST BE STATIONARY BEFORE SEAT IS ADJUSTED

Backrest Adjustment

Apply slight pressure to backrest prior to lifting lever. Lift the lever at the front, using body weight move backrest to required position, release lever to lock.

Height and Rake

To alter height of seat at rear lift rear lever and lean forward/back to adjust seat. Release lever to lock.

To alter height of seat at front lift lever and lean forward/back to adjust seat. Release lever to lock.

Dual Air Lumbar Support

Press the + to increase and – to decrease.
Adjust individual chambers to give the lumbar region of your back the desired Support.



Air Suspension

The air suspension automatically sets to the operators weight being between 50 & 130Kg.

Seat Slides

Lift slide handle to unlock and slide seat back/forward to required seated position. Release handle to lock.

For further information contact ISRI Seats Ph. 02 9756 6199

www.isri.com.au