



ISRI 6500KM/577 Air Suspension Seat Operators Instructions

SAFETY WARNING: VEHICLE MUST BE STATIONARY BEFORE SEAT IS ADJUSTED



Dual Air Lumbar Support

Press the + to increase and – to decrease. Adjust individual chambers to give the lumbar region of your back the desired Support.

Air Suspension Adjustment

Press the + to increase and – to decrease the air pressure in the seat suspension. This is not to be used as height control. The optimum setting being middle of suspension stroke. This seat is adjustable for operators weight being between 50 & 130Kg.

Backrest Adjustment

Apply slight pressure to backrest prior to lifting lever. Lift the lever, using body weight move backrest to required position, release lever to lock.

Height and Rake

To alter height of seat at rear lift outer lever and lean forward/back to adjust seat. Release lever to lock.

To alter height of seat at front lift inner lever and lean forward/back to adjust seat. Release lever to lock.

Seat Slides

Lift slide handle to unlock and slide seat back/forward to required seated position. Release handle to lock.

For further information contact ISRI Seats Ph. 02 9756 6199

www.isri.com.au