



ISRI 6000/515 Mechanical Suspension Seat Operators Instructions

SAFETY WARNING: VEHICLE MUST BE STATIONARY BEFORE SEAT IS ADJUSTED

Mechanical Lumbar Support

Wind the knob in a clockwise direction to increase and in an anti-clockwise direction to decrease.

Backrest Adjustment

Apply slight pressure to backrest prior to lifting lever. Lift the lever at the front, using your body weight move backrest to required position, release lever to lock.

Height and Rake

To alter height of seat at rear lift rear lever and lean forward/back to adjust seat. Release lever to lock.

To alter height of seat at front lift front lever and lean forward/back to adjust seat. Release lever to lock.

Suspension Adjustment

Turn handwheel clockwise / anticlockwise to adjust suspension to operator weight.



Seat Slides

Lift slide handle to unlock and slide seat back/forward to required seated position. Release handle to lock.