



ISRI 6000/577 Mechanical Suspension Seat Operators Instructions

SAFETY WARNING: VEHICLE MUST BE STATIONARY BEFORE SEAT IS ADJUSTED



Height and Rake

To alter height of seat at rear lift outer lever and lean forward/back to adjust seat. Release lever to lock.

To alter height of seat at front lift inner lever and lean forward/back to adjust seat. Release lever to lock.

Suspension Adjustment

Turn handwheel clockwise / anticlockwise to adjust suspension to operator weight.

Backrest Adjustment

Apply slight pressure to backrest prior to lifting lever. Lift the lever, using body weight move backrest to required position, release lever to lock.

Seat Slides

Lift slide handle to unlock and slide seat back/forward to required seated position. Release handle to lock.