



## ISRI 6030/880 Mechanical Suspension Seat Operators Instructions

**SAFETY WARNING: VEHICLE MUST BE STATIONARY BEFORE SEAT IS ADJUSTED**

### **Seat Tilt Adjustment**

To alter height of seat at front  
Lift lever and lean forward/back to adjust seat.  
Release lever to lock.

### **Seat Cushion Adjustment**

The seat cushion position can be adjusted,  
gently pull the lever up whilst sitting on the  
seat and push Hips forward/backwards.  
Release to lock.

### **Suspension Adjustment**

Turn hand wheel clockwise / anticlockwise to  
adjust suspension to operators weight.



### **Backrest Adjustment**

Apply slight pressure to backrest prior to lifting  
lever. Lift the lever, using body weight move  
backrest to required position, release lever to  
lock.

### **Seat Slides**

Lift slide handle to unlock and slide seat  
back/forward to required seated position.  
Release handle to lock.

For further information contact ISRI Seats Ph. 02 9756 6199

[www.isri.com.au](http://www.isri.com.au)