



## ISRI NCS 6830KM/875 Air Suspension Seat - Operator instructions

**SAFETY WARNING: VEHICLE MUST BE STATIONARY BEFORE SEAT IS ADJUSTED**

### **Horizontal Isolator**

Pull the lever up for isolator function to Operate. Push the lever down to lock the Isolator into a locked position.

### **Seat Cushion Adjustment**

The seat cushion position can be adjusted, gently pull the lever up whilst sitting on the seat and push hips forward/backwards. Release to lock.

### **Seat Tilt Adjust**

Gently pull lever up and lean back on the backrest to tilt the seat up. Gently pull the lever up and lean forward to tilt the seat down. Release to lock

 
### **Slide Adjust**

Lift slide handle and slide seat back/forward to the required position. Release to lock.



### **Air Suspension Adjustment**

Press the + / - button to adjust the seat into the desired position. In addition, adjust the shock absorber (as mentioned) to the road conditions to achieve the most comfortable seating position.

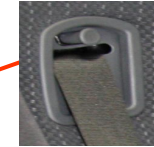

### **Seat Belt Height Adjustment**

To adjust the seat belt height push firmly on the button and slide up or down to the desired height.

### **Shoulder Adjustment (front lever)**

With body against upper backrest lift lever, Use body weight to move upper backrest support to required position. Release lever to lock.

### **Backrest Adjustment (rear lever)**

**First** apply **light** pressure to backrest, then gently lift lever up and lean rearward against backrest or lean forward to adjust the backrest incline. Release lever to lock.

### **IPS Air Lumbar Support**

Press the + to increase and - to decrease. Adjust individual chambers to give the lumbar region of your back the desired Support.  
**Note-** When operating lumbar seat will exhaust then return to seated height.

### **Shock Absorber Adjustment**

Gently push the lever down for a firmer suspension, lift lever for a softer suspension. Adjust to suit road conditions.

For further information contact ISRI Seats Ph:- (02) 9756 6199

[www.isri.com.au](http://www.isri.com.au)