



ISRI NCS 6830KM/875 Air Suspension Seat - Operator instructions

SAFETY WARNING: VEHICLE MUST BE STATIONARY BEFORE SEAT IS ADJUSTED

Shock Absorber Adjustment

Gently push the lever down for a firmer suspension, lift lever for a softer suspension. Adjust to suit road conditions.

Seat Cushion Adjustment

The seat cushion position can be adjusted, gently pull the lever up whilst sitting on the seat and push hips forward/backwards. Release to lock.

Seat Tilt Adjust

Gently pull lever up and lean back on the backrest to tilt the seat up. Gently pull the lever up and lean forward to tilt the seat down. Release to lock.


Slide Adjust

Lift slide handle and slide seat back/forward to the required position. Release to lock.



Air Suspension Adjustment

Press the + to increase and - to decrease the air pressure in the seat suspension. The optimum setting being middle of the suspension stroke. **This is not to be used as height control**

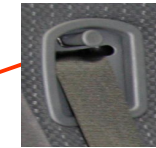

Seat Belt Height Adjustment

To adjust the seat belt height push firmly on the button and slide up or down to the desired height.

Shoulder Adjustment (front lever)

With body against upper backrest lift lever, Use body weight to move upper backrest support to required position. Release lever to lock.

Backrest Adjustment (rear lever)

First apply **light** pressure to backrest, then gently lift lever up and lean rearward against backrest or lean forward to adjust the backrest incline. Release lever to lock.

IPS Air Lumbar Support

Press the + to increase and - to decrease. Adjust individual chambers to give the lumbar region of your back the desired Support.

Note- When operating lumbar seat will exhaust then return to seated height.

Horizontal Isolator

Pull the lever up for isolator function to Operate. Push the lever down to lock the Isolator into a locked position.

For further information contact ISRI Seats Ph:- (02) 9756 6199

www.isri.com.au